

Anleitung

Active Suspension Control

Enlargement package for venting

Content

1. Disclaimer	1
2. Copyright	1
3. Safety Instructions	1
4. General Informations	1
5. General remarks	2
6. Removing the covers	3
7. Electronic Montage	4
7. Electronic Montage	5
7. Electronic Montage	6
7. Electronic Montage	7

1. Disclaimer

The content listed in this manual is created with greatest possible care. The Cete Automotive GmbH assumes no responsibility for the completeness, topicality and accuracy for the listed content. The use of content takes place at the user's own risk. Therefore we - the Cete Automotive GmbH - assume no liability and responsibility for damages and defects, which arise from operation or incorrect handling and maintenance.

2. Copyright

The published contents, works and informations in this manual are subject to the German copyright law. Any form of reproduction, processing/editing, distribution, copying, editing, translation, storage and any kind of use outside the limits of copyright law require the written approval of the particular. Unauthorized copying/saving of the provided informations in this manual are illegal and criminal.

3. Safety Instructions

The installation can only be fulfilled by trained specialists. The installation has to be done while the car's battery is unplugged. The installation has to be done step by step as it's described in this mounting guideline. The Cete Automotive GmbH does not take responsibility for damages, caused through:

- improper installation
- the usage of unsuitable connectors
- installations in not mentioned car models

The producer reserves the right to change components without giving reasons Errors and omissions excepted

4. General Informations

We ask you to read this manual thoroughly and completely and uphold to the given instructions. During the development we focused on safety, ease of use, design, innovative development, etc, to guarantee a high quality product for the consumer. Despite the greatest care improper installation and using or incorrect operation can result in material damages. Depending on the product and it's purpose it may be necessary to check the legal requirements of the country before commissioning. To receive consideration for warranty claims the product has to be send back with it's original package, the proof of purchase and an error description. Please note the returns policies. The warranty regulations apply. The warranty claim and the operating permit expires through: unauthorized modification of the product, own reparings, violent impacts, improper use, opening the case.

5. General remarks

Please note, that the Active Suspension Control is a vehicle requiring official approval product. Please register this product as soon as possible.

The Images and Content shown in this installation guide only serve as a help for you. Please remove the covers according to the repair manual of the respective manufacturer.

6. Removing the covers



Step 1)

The place of installation is located at the back seat of your car.



Step 2)

Remove the ISOFIX-mounts.



Step 3)

Now you have to remove the backseat. Therefore you have to pull slightly the backseat from top down. It is only clipped in, you don't have to remove any screws. Work carefully and watch out for connected lines.



Step 4)

Once you have removed the backseat, you have to clear your workspace.

7. Electronic Montage



Step 5) Expose the Gateway

In the middle of the backseat you can find a cover, which has to be removed. Under the cover you will see the Gateway.

For exposing the control unit just lift up the cover.



Step 6) Expose the Gateway

In the next step you have to unlock the plug of the control unit. After unlocking the plug, just pull it off.



Step 7) Expose the Gateway


Pull down the rail latch with a screw driver on both sides.



Step 8) Clearing the distributor


For clearing the distributor you just have to pull off the unlocked case of the plug.

7. Electronic Montage

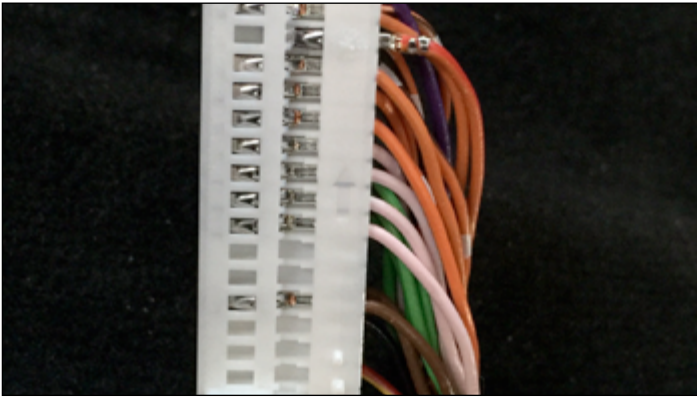


Step 9) Clearing the distributor

Pin out the wire with the color orange / red (orange wire with red stripe).

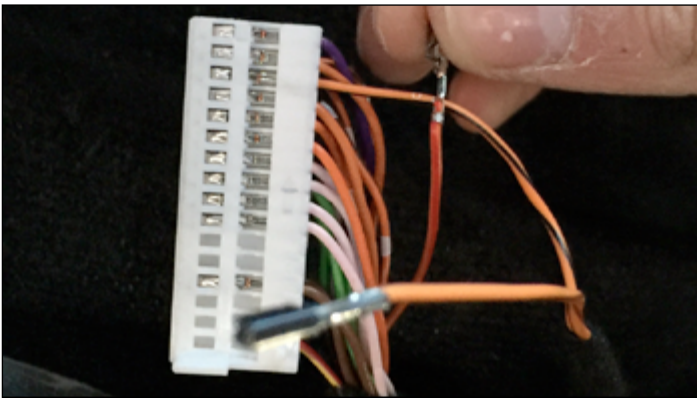

Step 10) Pinning in new wiring harness

In the free pin slots you have to pin in the orange / black wire (orange wire with black stripe) from the new wire harness.

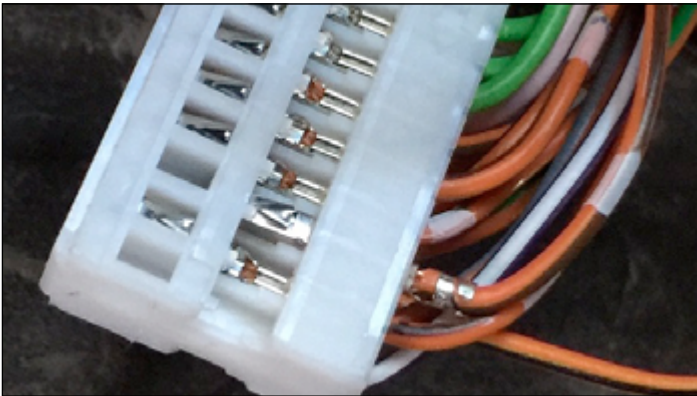

Step 11) Clearing the distributor

Now pin out the twisted pair of the orange / brown wire (orange wire with brown stripe) of the opposite side.



Step 12) Pinning in new wiring harness

In the free pin slots you have to pin in the orange / brown wire (orange wire with brown stripe) from the new wire harness.


7. Electronic Montage



Step 13) Empty Housing

The original wire (orange/red) has to be pinned in in pin 1 of the enclosed empty housing.

The original wire (orange/brown) has to be pinned in in pin 2 of the enclosed empty housing.

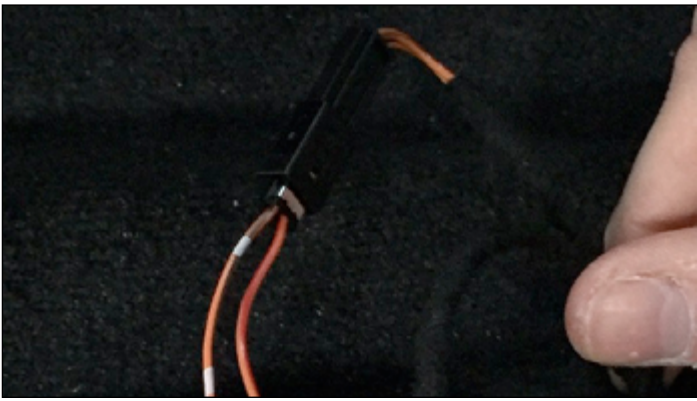

Step 14) Connecting the plugs

Now bring together the plugs or rather the adapter and stow them carefully.



Step 15) Wire installation

The wire has to be installed to the ASC on the right side of the (rear-)trunk.



Step 16) Wire installation

We strongly suggest to install the wire to the original harness of the vehicle.

7. Electronic Montage



Step 13) Connection to the ASC harness

After you have installed the wires to the (rear-) trunk you can connect them to the ASC harness.

If everything is installed you can start reinstalling the backseat.

To activate the venting, you need to set the Show-Mode to 0mm for front and rear axle.

If you do not want to use the venting, you can select the desired value for the Show-Mode as usual.